
Surface Mounting Ceiling Installation Instruction

This installation instruction is for D4570 /O4585 /D6280 of ceiling mounted lamps.


2

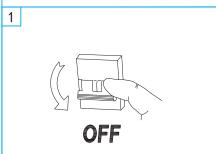


N-L mm (refer to the table 1) power cord Board/Cemet Ceiling dimension diagram

of ceiling cable installation.



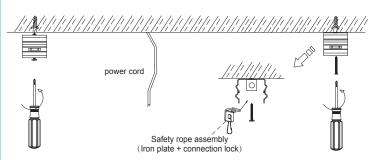


Install the wire safety rope and connect the power cord

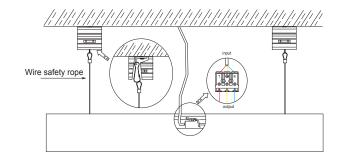

Install the housing

6

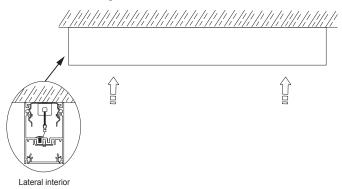


Expansion screws

Gasket (1mm/2mm optional)


③ Spring buckle

④ Hook (with safety rope attached to lock when installing, as shown in the picture)

Screw

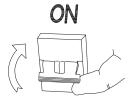

	Model	Size(mm)	Suggest distance of two spring buckles
	D4570	1124×45×70	900
	D6280	1124×62×80	900
	04585	1124×45×85	900

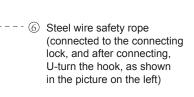

Top view of the lamp body, screw the iron sheet and the lamp body together